


TUBING SWAGES

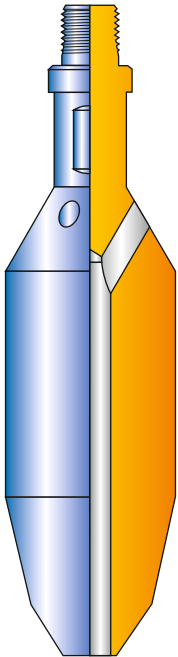


TUBING SWAGE

PARVEEN Tubing Swage are used to remove large obstructions and restore light collapse in the tubing. This allows smooth running of tool string in well bore. The OD of tubing swage should be equal to tubing drift ID. It should be run with up stroke jar to enable operator to take it out of tubing if swage is jammed.

TUBING SWAGES				
Size (in)	Max O.D. (in)	F/N O.D. (in)	Top Connection	Part No.
1-1/2	1.521	1.187	15/16-10 UN	101511
2	1.906	1.375	15/16-10 UN	102021
2-1/2	2.344	1.375	15/16-10 UN	102321
3	2.937	1.750	1-1/16-10 UN	103032
4	3.720	1.750	1-1/16-10 UN	103732

- Other Sizes Available On Request.

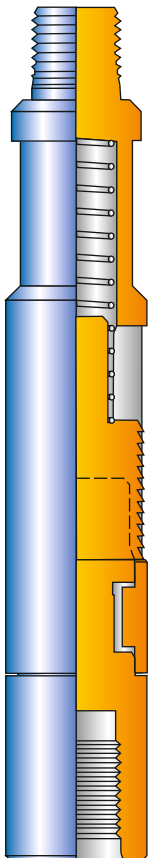

QUICK LOCK COUPLING

QUICK LOCK COUPLINGS

PARVEEN Quick Lock Coupling is designed to provide an operator with a fast and safe means of changing over tools without the use of wrenches. By using a spring loaded slide, the quick lock coupling is easily released or secured together.

QUICK LOCK COUPLINGS				
Size (in)	Max. O.D. (in)	F/N. O.D. (in)	Connection Pin X Box	Part No.
1-1/4	1.250	1.187	15/16-10 UN	052511
1-1/2	1.500	1.375	15/16-10 UN	051521
1-7/8	1.875	1.750	1-1/16-10 UN	051932
2-1/2	2.500	2.312	1-9/16-10 UN	052456

- Other Sizes Available On Request.